INSTALLATION DIAGRAMS

METRO COMBINATION BRAKE BLOCK SETS

WEDGE AND S-CAM BRAKES

ABEX 697EE AND ABEX 685FF


(ABEX 685FF IS IDENTIFIED BY GREEN STRIPE)

WEDGE BRAKE

15" and 15 1/8" Diameter

Drum Brakes

(RTS Coaches)

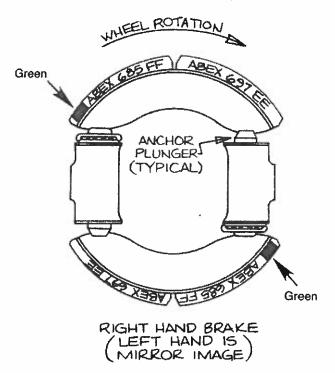


S-CAM BRAKE

14 1/2" and 16 1/2" Diameter

Drum Brakes

(Transit Buses)

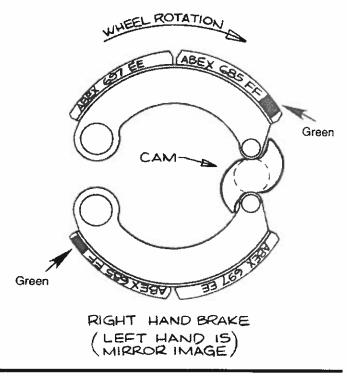

APS-0203 Rev. 09-2003

BRAKE LINING MUST BE MOUNTED WITH ONE WEAR LINE ON EACH SIDE OF THE SHOE



